





OF THE STRING UNDER


THE LONG END.


CF LC

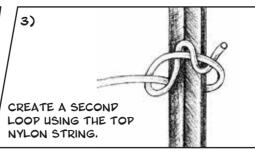




TIGHTEN THE KNOT BY TUCKING THE SHORT ENP OF THE STRING UNDER THE EPGE OF THE BRIPGE.




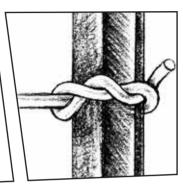


5) TIE THE STRING TO THE TUNING MACHINE, FIX IT TO THE PEG WITH A LOOP AND TIGHTEN THE LOOP TO THE PEG.

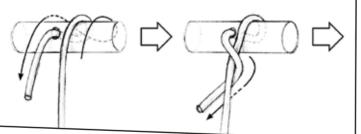

6) THEN THE STRING CAN BE WOUND AND TIGHTENED TO THE PEG. CUT OFF THE REST OF THE REMAINING STRING WITH WIRE CUTTERS.

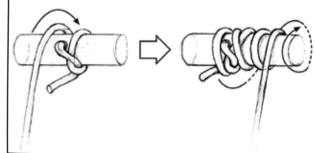

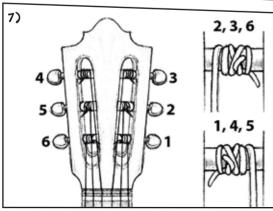

FASTENING THE STRINGS: STRINGS 1, 4 ANP 5 ARE FASTENED IN THE FOLLOWING WAY. STRINGS 2, 3 ANP 6 ARE KNOTTED AND WOUND IN THE OPPOSITE PIRECTION.

AFTER YOU PUT ON ALL 6 STRINGS YOU CAN TUNE THEM. AFTERWARPS PLEASE STRETCH THE STRINGS AND TUNE THEM AGAIN

TIP:

IT IS BETTER TO KEEP YOUR HANDS AWAY FROM CHEAP STRINGS AS THEY DETUNE QUICKLY AND OFTEN BREAK WHEN PUTTING THEM ON YOUR INSTRUMENT.

THE RIGHT STRINGS WILL HELP YOU SOUND LIKE A PROFESSIONAL.

>>> HANNABACH 890 SERIES!